


PACKING ADJUSTMENT — Open valve at least partially before tightening nut. Excessive torque when valve is closed can drive stem into seat & cause DAMAGE.

GLASS BLOW-DOWN & BALL CHECK OPERATION: To re-establish LEVEL in glass CLOSE valves to knock balls off checked position, then open slowly to allow fluid flow; then FULL OPEN to allow automatic ball check action in case of glass or gasket failure.

Inferno Mfg. Corp.
318-221-8454
P/N 10101

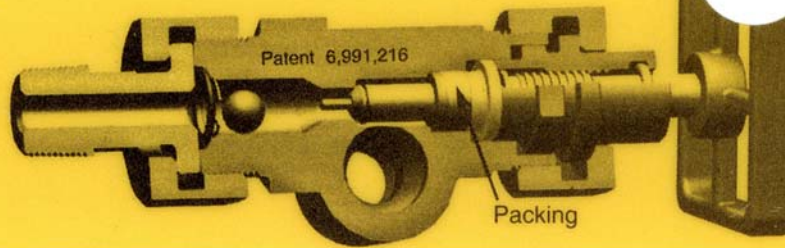

CAUTION